OWNER BY





DAB+ FUNCTION



SAFETY INFORMATION

- In general, the assembly and installation of the device must be performed by a trained and technically skilled specialists, as the installation and connection of the device requires complex knowledge.
- This device is only suitable for the operation in a vehicle with an on-board voltage of 12 volts, negative
 ground.
- Improper installation or use may void the warranty.
- Note any time the traffic regulations of the country in which the device is operated.
- Please ensure, that with the engine turned off the vehicle's battery does not discharge fully. The device is another electrical consumer which must be operated with the engine running, other-wise the vehicle's battery will be discharged and the vehicle can not be started.
- Set the volume of the device only as loud, that you are still be able to hear warning signals (e.g. police sirens) and traffic noise inside the vehicle.
- Operate the device as driver only if it's absolutely necessary and in the driving safety is not compromised. The same stands for looking at the screen. If necessary, better park your vehicle at a safe and appropriate location.
- The traffic rules of the EU prohibit to view moving pictures or movies while driving, if the screen of the device is installed within sight of the driver, as he may be distracted. View the screen as driver only for the navigation function, and then only briefly that you will not be distracted. Note at any time the local traffic regulations. In an accident, regress claims could be made by the car insurance company.
- This device is not a substitute for your personal judgment or perception. All suggested routes from the navigation system should never be taken as a reason to disregard the local traffic rules. Your personal assessment of traffic or your knowledge of safe driving practices is paramount. Always match your driving with the current traffic situation.
- Do not follow the suggested routes, if the navigation system instructs you to take an unsafe or illegal way, puts you in an unsafe situation, or directs you into an area which you consider unsafe.
- If problems occur while driving, park the vehicle in a safe and appropriate place to continue before you
 operate.

SAFETY INFORMATION


- The device supports only DVD/CD standard disk size of diameter with 12 cm. Do not attempt to insert disks with a different size or any other object into the disk slot. Be sure to load only one disk at the same time.
- Please use only the included original accessories. Ensure a sufficient mounting of the device by using the
 included installation accessories, as in the event of an accident enormous accelerations may occure. Poorly
 installed devices and equipment in accidents could represent a severe risk to the driver and the other passengers of the vehicle.
- Note under all circumstances the regulations and advices of the vehicle manufacturer and do not make any modifications to the vehicle, which could interfere with safe driving. Please treat all parts of the device and the components of your vehicle always with caution.
- Please avoid short circuits and make sure that no metal objects can get inside the device. Also make sure
 that all connections are properly connected and avoid the interchanging of the polarity of all connections.
 Complete the installation only while the the ignition is turned off.
- In the event of a defect or malfunction, do not attempt to repair it by yourself or open the device, this is dangerous and could cause injury or damage to the equipment or vehicle. A repair should be done by trained and authorized personnel only. The device uses a Class 1 laser to read the disk. Eye contact with a laser is very dangerous to the human eye.
- If you connect an external device, you should first read the instruction manual of the external device and make sure that it is compatible. Avoid connecting an incompatible external device.
- If you install external applications onto the operating system of the device or operate files, make sure that they are "virus free" and compatible with Windows CE 6. Otherwise there is a risk that the operating system no longer works properly and must be reinstalled.
- Do not damage or scratch the screen with sharp objects. Do not operate the screen with hard objects.

SKINS / DESIGN THEME

The DAB+ operation currently only works with the Skins "Volkswagen", "Volkswagen (Green), "Golf7" "Blue" and "Dark Color". Please choose at first one of the compatible skins.




Tap on "Apps".

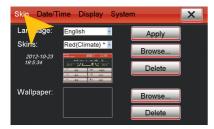

Tap on "Skin".



Tap on "Options".

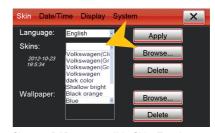

Chose a DAB+ compatible Skin. Tap then on "Apply".

If one of the skins is not available, you can download them from **www.esxaudio.de/navi** in the download area. Check regularly this address to find out if there are more compatible skins for your DAB + device. Make sure that you always use the latest version.

If the control panel "DAB+" do not appear in your main menu, you must first change the control panel assignment. Proceed as follows:



Main menu without "DAB+".



Tap on e.g. on "Radio" until the blue selection menu appears and select "Edit".



To exit the "Edit" mode, press briefly onto the upper part of the screen.



Tap and hold for about 5 seconds one of the control panels until all fields are bordered by dashed line.



Then select "DAB +" from the list and confirm with "OK". Should the entry can not be found, scroll down the list to the bottom, or make sure that you are using the latest version of the selected skin and if it's DAB + compatible.



TIP: If your device features a RADIO keypad, pressing and holding opens up the DAB menu as well.

DAB+ CHANNEL SEARCH & FAVORITES



Tap on "DAB+".



Tap the magnifying glass to start the channel search.



Direct frequency input: This function is only used to verify the local reception situation or to test an individual frequency block. Type in the desired frequency into the white box (only numbers and dot) and confirm the entry by tapping the magnifying glass.

Note: After such a confined search only the channels in the selected frequency will be displayed in the channel list and in the favorites list!*



Here your favorites will appear later. Tap on "Channel List".



After the scanning all available DAB stations are listed here. You can only select one of the station directly.



To mark a channel as favorite and to show him as favorite button in the DAB+ menu, select and press the corresponding channel field for about 2 seconds. The yellow star indicates which channel is a favorite.

^{*} If you want to search for all available stations, make sure that in this white box no frequency is displayed. Delete the entry with the "<-" button.


DAB+ FAVORITES & OPERATION



To remove a channel from the favorite list, press and hold the corresponding channel field for about 2 seconds. The yellow star is then no longer displayed.



To delete all favorites press the button "Delete All". **CAUTION:** This procedure can not be undone.

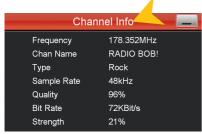

Under "Channel Info" you will find detailed information about the current station.



It is also possible to store the currently playing station to the favorites list. Tap on "Add". NOTE: A duplicate storage is not possible.



To select your favorites, you can tap now the channel fields in the favorite list. Use the red arrows to switch to the previous or next favorite list



Under,,Audio" you can configure the audio settings as usual.



